2-Port / 4-Port

COMBO KVM SWITCH

KVM-210 / KVM-410

Quick Installation Guide

Table of Contents

1. Introduction 3

    1.1 Features 3

    1.2 Package Contents 3

2. Specifications 4

    2.1 General 4

3. System Requirements 5

4. Installation 6

    4.1 Single installation 6

5. Operations 9

    5.1 Push Button on front panel 9

    5.2 Hot-Key operation (PS/2 Keyboard) 9

        5.2.1 Hotkey Selection 9

        5.2.2 PCs Selection 10

        5.2.3 Auto-Scan Function 10

        5.2.4 Beeper Enable 11

    5.3 Audio (Speaker + Microphone) Selection 12

        5.3.1 (PC+Audio) Combination Selection 12

        5.3.2 Single Audio (Speaker + Microphone) Selection 12

1. Introduction

Thank you for your purchase of PLANET Combo KVM Switch! You now have a high quality, durable system that will enable you to control 2/4 Host computers and/or servers by using PS/2 and/or USB Connectors from one console (PS/2 Mouse & PS/2 Keyboard, and Monitor).

1.1 Features

- Complex connections with PCs via either way of PS/2 and/or USB arbitrarily
- Controls 2 / 4 computers from a single console PS/2 (Keyboard/Mouse) over PS/2 and/or USB connections
- Supports Windows, Linux, Mac OS9/OSX, Sun Microsystems
- Emulates a keyboard on each PC to allow your computers to boot normally without a keyboard error
- hot-swap. All devices connected to the KVM can be added or removed at any time, without shutting the unit down
- 2 types of switching. Hardware Push Button and Hot-Keys on keyboard
- Auto-Scan function to alternate video between computers in preset intervals
- LED display for PC status monitoring
- VGA resolutions up to 2048 x 1536 @ 85HZ
- Beeper during switching enabled
- Self powered through PS/2 and/or USB connection
- Supports audio port for connect microphone and speaker
- Fully compliant with the USB 1.1/2.0 specification

1.2 Package Contents

The product you purchased should contain the following equipment and accessories:

1. KVM-210 / KVM-410
2. Quick Inatallation Guide
3. Two or Four sets of combo custom 4-in-1 cables.
4. Two or Four sets of (speaker+microphone) cables.

2. Specifications

2.1 General

Specification		
Number Of Computers Controlled		2 / 4
Selection Method		Push Button and Hot-Key (PS/2 Keyboard)
LEDs		Red for PC Selection Green for PC On-Line ready
PC Connectors	Video	2 / 4 x HDB -15 male (USB & PS/2 signal combined)
	Speaker	2 / 4 audio female jacket (audio version)
	Microphone	2 / 4 audio female jacket (audio version)
Console Ports	Keyboard	1 x 6 pin mini-DIN female
	Mouse	1 x 6 pin mini-DIN female
	Video	1 x HDB -15 female
	Speaker	1 x audio female jacket (audio version)
	Microphone	1 x audio female jacket (audio version)
Auto-Scan Interval		From 5 to 250 Seconds
DDC, DDC2 monitor		Yes (Max. Resolution: 2048 x 1536) @ 85Hz
Hot Swappable		Yes
Operating systems supported		Windows 98SE/ME/2000/XP/2003/Vista, Linux Mac OS9/OSX and Sun Micro System
Device driver		No Need
Power		By PS/2 and/or USB or External Power Adaptor (Optional)
Cable Length		6 feet (1.80 Meter)
Dimensions (L X W X H)		KVM-210: 14.0 x 8.5 x 4.5 cm KVM-410: 21.5 x 8.8 x 4.5 cm
Unit Weight		2-Port : 420 g 4-Port : 675 g
Housing material		Metal
Operating Temperature		32 ~ 122°F (0 ~ 50°C)
Humidity		0%~80%RH

3. System Requirements

Console

A VGA, SVGA, Multisync monitor capable of the highest resolution.

PS/2 Keyboard/Mouse

Computer or Server

The following equipment must be equipped with each computer or server.

- A VGA, SVGA or Multisync card.

- Type A USB port or PS/2 6 pin mini-DIN for Keyboard and Mouse.

Cables

The Combo Free KVM Switch must be used specific custom 4-in-1 cables.

To purchase the specific cable sets, please contact your dealer.

4. Installation

LED Indicators:

: RED LED indicates that the KVM Switch is selected to the corresponding PC.

: GREEN LED indicates that the KVM Switch is ready to the corresponding PC.

Reset Switch:

Press this switch when a system reset. This switch must be pushed with a thin object, for example, such as the end of a paper clip, or a ball point pen.

4.1 Single installation

Precaution:

1. With under running OS Windows 98 , we sugget that the PC must be plugged to PS/2 ports, because of Windows 98 is not support installation at first time as through USB HID installation driver.
2. There are some of older PCs can support USB ports during booting, but you need to open BIOS USB setting at first.

Console connecting:

Plug your PS/2 keyboard, mouse and VGA video into the Console ports located on the KVM Switch's front panel.

System connecting:

Use KVM custom cable sets to connect any available PC ports to the video and

either USB or PS/2 ports alternatively, or even USB & PS/2 both all connected to the computers you are connecting up.

Note	The custome cable set, as Fig. 1, is supplied cable set with this package; any additional sets is required purchase separately.

To purchase the custom KVM cable sets, please contact with your dealer.

Fig. 1 combo custom 4-in-1 cable

Tune monitor display quality:

If you are using LCD monitor connected with Combo KVM switch and feel the quality is not comfortable to you, then you can push monitor panel Auto-Adjusting function button to tune gain better display quality at just the first time. After then, the display quality will be remained better condition continuously.

This KVM Switch with custom specific cable set provide three connecting methods.

1. Plug Speaker, Microphone,USB, PS/2 (keyboard/mouse) ports and VGA into PCs at same time, recommended in priority. (Fig. 2)

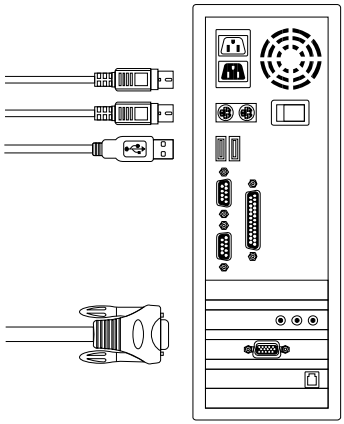

Fig. 2 Speaker, Microphone, PS/2 & USB and VGA connected at same time.

2. Plug only Speaker, Microphone, PS/2 (keyboard / mouse) ports and VGA into PCs. (Fig. 3)

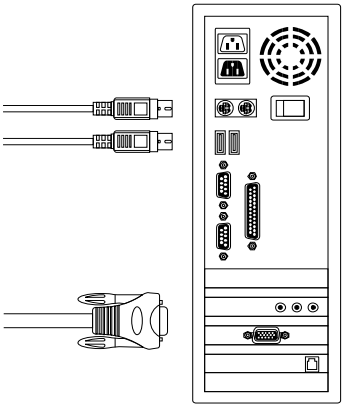

Fig. 3 Speaker, Microphone, PS/2 and VGA connected.

3. Plug only Speaker, Microphone,USB and VGA into PCs. (Fig. 4).

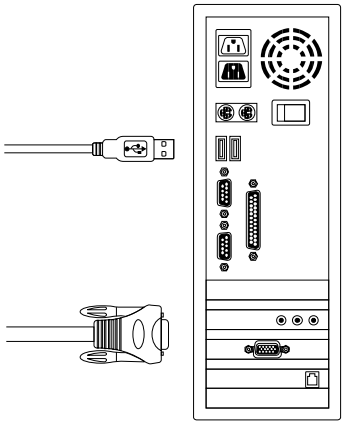

Fig. 4 Speaker, Microphone, USB and VGA connected.

5. Operations

The 2 / 4-Port Combo KVM Switch has the ability to switch the keyboard, video, mouse, audio, microphone simultaneously.

Note	When using the two-step Hot Key sequences, the keys must be pressed within 5 seconds; otherwise the Hot Key action will be terminated.

5.1 Push Button on front panel

There are four switch buttons, you can press the button to select which PC you would like to control.

5.2 Hot-Key operation (PS/2 Keyboard)

Note	If your keyboard is without <Scroll Lock> button, please press <Caps Lock> or <Num Lock> instead of Scroll Lock (please reference 5.2.1).

5.2.1 Hotkey Selection

Hot Key:

[Ctrl] ➡ [Ctrl] ➡ [Caps Lock] ➡ [Enter] : The hotkey changed to [Caps Lock]

[Ctrl] ➡ [Ctrl] ➡ [Num Lock] ➡ [Enter] : The hotkey changed to [Num Lock]

[Ctrl] ➡ [Ctrl] ➡ [Scroll Lock] ➡ [Enter] : The hotkey reversed to [Scroll Lock]

Note	The default hotkey setting is <Scroll Lock>, after you changing the hotkey setting, the new setting will effect on the KVM until power off or reset.

5.2.2 PCs Selection

Hot Key:

[Scroll] ➡ [Scroll] ➡ [1] ➡ [Enter] or [Scroll] ➡ [Scroll] ➡ [2] ➡ [Enter] or

[Scroll] ➡ [Scroll] ➡ [3] ➡ [Enter] or [Scroll] ➡ [Scroll] ➡ [4] ➡ [Enter]

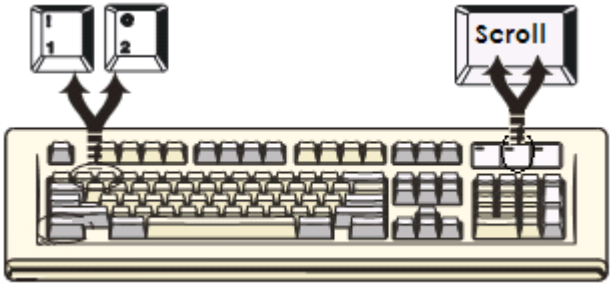

You can synchronize the PC selection, by using the following two-step Hot Key sequence. To send commands to the Combo KVM Switch, press the [Scroll] key twice (Step 1), then press key [1] or [2] or [3] or [4] and [Enter] (step 2) to assign the PC to a particular PC. **(If you press key [1] or [2] or [3] or [4] on the number pad, the keyboard, mouse & video will also be switched synchronously.)**

5.2.3 Auto-Scan Function

Hot Key:

[Scroll] ➡ [Scroll] ➡ [S] ➡ [Enter] to **BEGIN**.

[Scroll] ➡ [Scroll] ➡ [S], ➡ [Enter] to **STOP.**

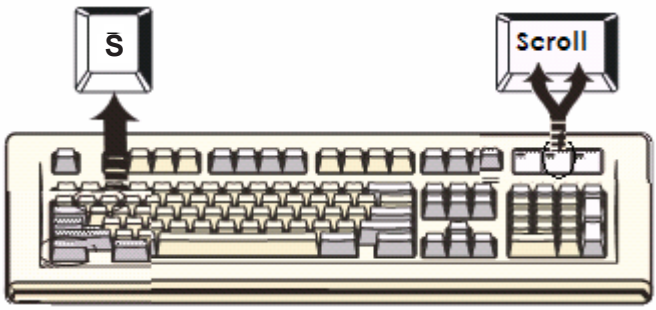

You can activate the Auto-Scan function by using the following two-step Hot Key sequence. To send commands to the Combo KVM Switch, press the [Scroll] key

twice (Step 1), then press [S] and then press [Enter] (Step 2). When you press the Auto-Scan hot key sequence, the Combo KVM Switch alternates between the two or four PCs and displays them on the monitor.

Each PC is display one of time interval from 5 ~ 250 seconds (The interval is adjustable) before switching to the next. When you press the Auto-Scan Hot Key sequence again, the Auto-Scan will stop and the monitor screen will jump back to the original PC.

Adjustable scan time interval setting (5 ~ 250 sec.)

Hot-key:

Pressing the <Scroll>, <Scroll> then <S> and <5 ~ 250> <Enter>

5.2.4 Beeper Enable

Hot Key:

[Scroll] ➡ [Scroll] ➡ [B] ➡ [Enter] to Disable

[Scroll] ➡ [Scroll] ➡ [B] ➡ [Enter] to Enable

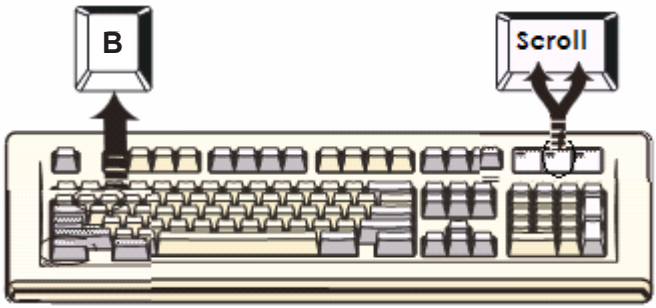

The Speaker/Beeper's default setting is "Enable". While the switching connections are activated and Speaker/Beeper is in "Enable" status, the beeper has a short beeping sound.

5.3 Audio (Speaker + Microphone) Selection

5.3.1 (PC+Audio) Combination Selection

Hot Key:

[Scroll] ➡ [Scroll] ➡ [F1] ➡ [Enter] or [Scroll] ➡ [Scroll] ➡ [F2] ➡ [Enter] or

[Scroll] ➡ [Scroll] ➡ [F3] ➡ [Enter] or [Scroll] ➡ [Scroll] ➡ [F4] ➡ [Enter]

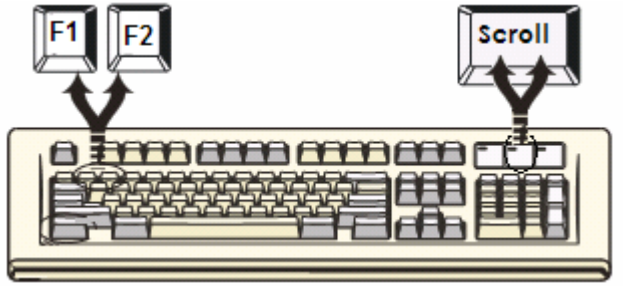

5.3.2 Single Audio (Speaker + Microphone) Selection

Hot Key:

[Scroll] ➡ [Scroll] ➡ [A] ➡ Enter] to enable or disable the audio auto switch mode

[Scroll] ➡ [Scroll] ➡ [A] ➡ [1] ➡ [Enter] to select PC1 Speaker and Microphone

[Scroll] ➡ [Scroll] ➡ [A] ➡ [2] ➡ [Enter] to select PC2 Speaker and Microphone

[Scroll] ➡ [Scroll] ➡ [A] ➡ [3] ➡ [Enter] to select PC3 Speaker and Microphone

[Scroll] ➡ [Scroll] ➡ [A] ➡ [4] ➡ [Enter] to select PC4 Speaker and Microphone

Note 1:

Note	Audio auto switch mode, the default setting of KVM switch is enabled, means when you used the push button, the PCs and Audio will be switched at the same time. In case of the Audio auto switch mode is disabled, then the push button only switch PCs.

Note	One long sound – Audio auto switch disabled Three short sound – Audio auto switch enabled

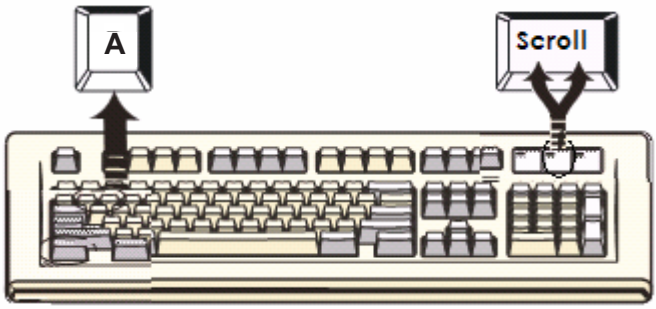

Hot Key definition table

Step 1	Step 2	Action
[Scroll] + [Scroll]	[1] + [Enter]	Switch the active connection to PC 1
[Scroll] + [Scroll]	[2] + [Enter]	Switch the active connection to PC 2
[Scroll] + [Scroll]	[3] + [Enter]	Switch the active connection to PC 3
[Scroll] + [Scroll]	[4] + [Enter]	Switch the active connection to PC 4
[Scroll] + [Scroll]	[A] + [Enter]	Disable or enable the Audio auto switch mode
[Scroll] + [Scroll]	[F1] + [Enter]	Combined switching (PC+Audio) to PC 1
[Scroll] + [Scroll]	[F2]+ [Enter]	Combined switching (PC+Audio) to PC 2
[Scroll] + [Scroll]	[F3] + [Enter]	Combined switching (PC+Audio) to PC 3
[Scroll] + [Scroll]	[F4] + [Enter]	Combined switching (PC+Audio) to PC 4
[Scroll] + [Scroll]	[A] + [1] + [Enter]	Single switching the active audio to PC 1
[Scroll] + [Scroll]	[A] + [2] + [Enter]	Single switching the active audio to PC 2
[Scroll] + [Scroll]	[A] + [3] + [Enter]	Single switching the active audio to PC 3
[Scroll] + [Scroll]	[A] + [4] + [Enter]	Single switching the active audio to PC 4
[Scroll] + [Scroll]	[B] + [Enter]	Disable or enable beeper
[Scroll] + [Scroll]	[S] + [Enter]	Activate the Auto-Scan mode, default 5 sec.
[Scroll] + [Scroll]	[S] + [5 - 250] + [Enter]	Select the Auto-Scan interval from 5 to 250 Sec.

Sun Microsystems Function Key Emulation:

There are 16 special functions on the Sun Microsystems keyboard, the Combo KVM Switch can emulate these function keys via the PS/2 keyboard. Here is the mapping table for these functions operation. To active these emulation on the PS/2 keyboard, you have to press the LEFT Window KEY first (this key usually is located between the left [Ctrl] and left [Alt]), then choice the second relative key.

Sun Micro System Function Key	PS/2 Keyboard
Stop	L_Win & L_Alt
Props	L_Win & L_Ctrl
Compose	L_Win & L_Shift
Front	L_Win & F1
Open	L_Win & F2
Find	L_Win & F3
Again	L_Win & F4
Undo	L_Win & F5
Copy	L_Win & F6
Paste	L_Win & F7
Cut	L_Win & F8
Help	L_Win & F11
Power	L_Win & F12
Mute	L_Win & 1
Volume Down	L_Win & 2
Volume UP	L_Win & 3

This page is intentionally left blank

This page is intentionally left blank